



Samsung Rogue Keyboard Replacement

Use this guide to replace the keyboard.

Written By: Viktoria Mikoultchik



INTRODUCTION

This guide will provide a step-by-step procedure for replacing the keyboard in your Samsung Rogue.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



i Before disassembling your Samsung Rogue, make sure it is powered off.

- With your thumbs, push down on the back cover of your phone and slide it away from the camera.

Step 2



- You can now remove the battery by prying it up with your finger.

Step 3 — Motherboard



- Use a plastic opening tool to carefully pry the back cover surrounding the camera up from the phone.

Step 4



- Remove the five 3.4mm Philips screws securing the backing of the phone.

Step 5




- Use a plastic opening tool to carefully pry off the back cover.
- ⓘ Make sure you are prying along the edge and not between the two halves of the phone that slide away from each other.
- ⚠ Be careful to not drop the volume changing piece, for it can easily slip out.

Step 6



- Remove the two 3.45 mm Philips screws below the white sticker.



Step 7

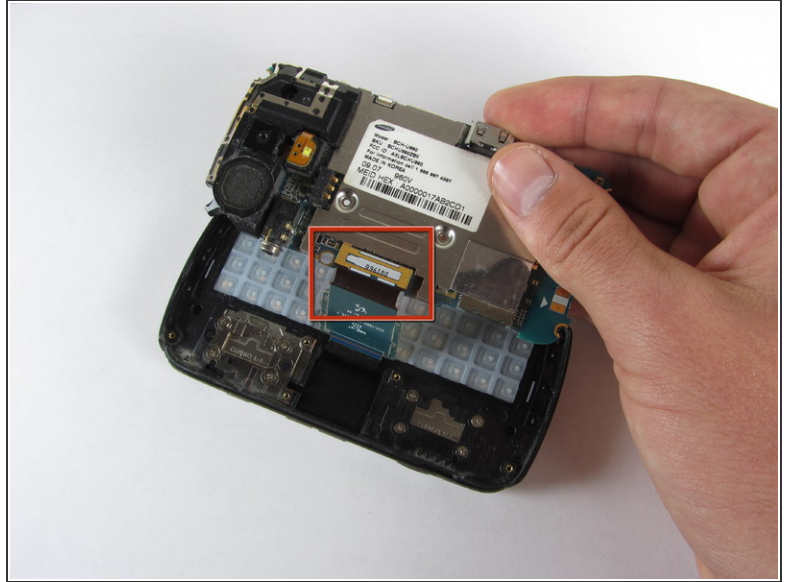

- Carefully lift the motherboard up from the bottom edge.


⚠ The film of wires is still attached to the motherboard, so do not completely remove the motherboard just yet or you may damage it.

Step 8

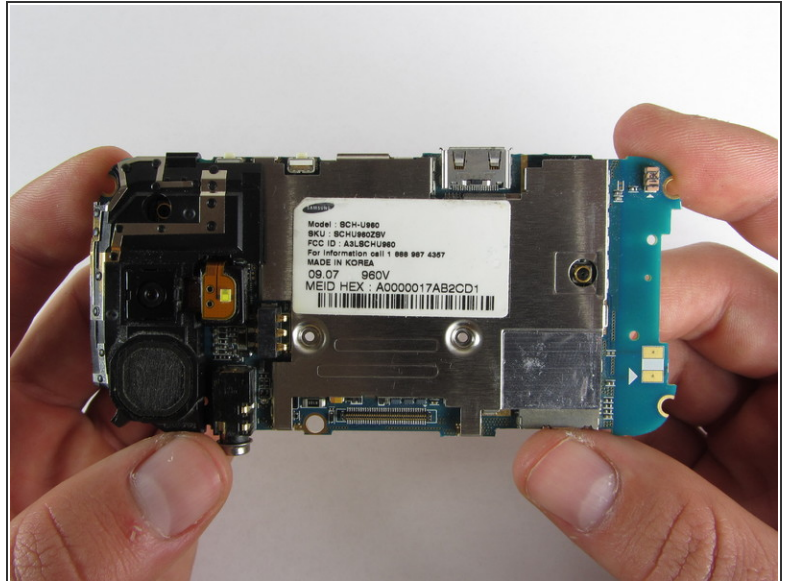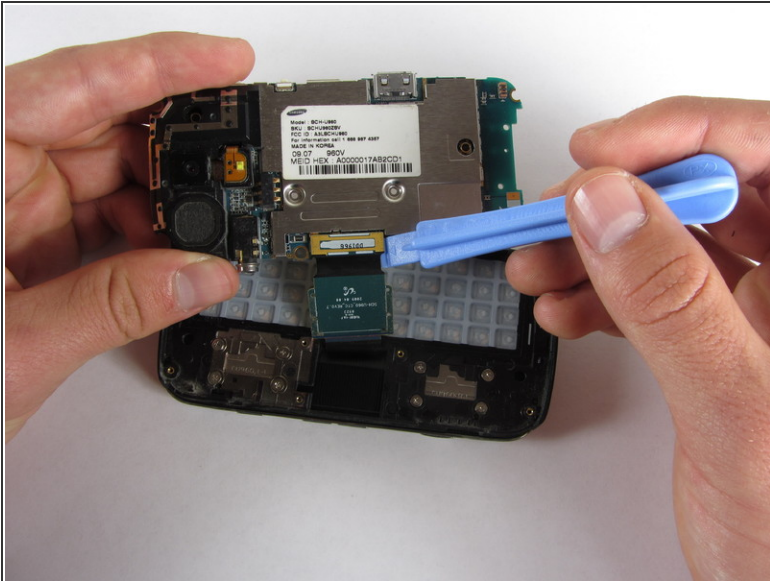


- Use a plastic opening tool to disconnect the film from the motherboard.

Step 9 — Keyboard

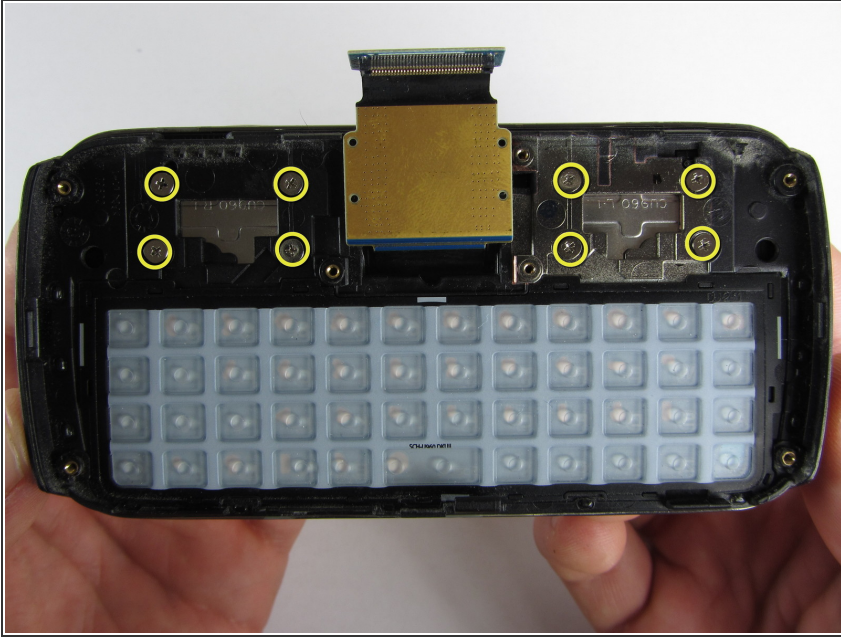


- Remove the eight 1.7mm Philips screws above the keyboard.

Step 10

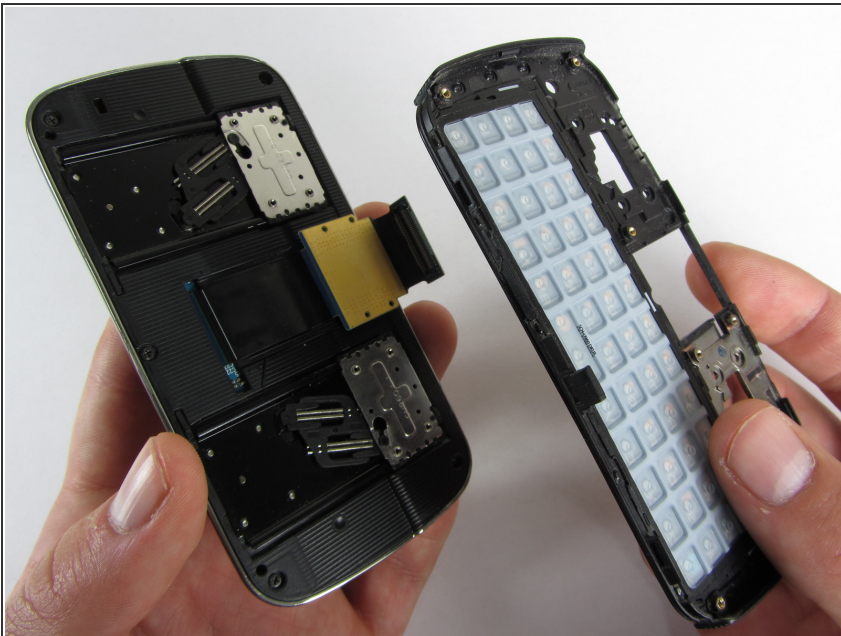

- Carefully remove keyboard holder from the slider mechanisms underneath.

Step 11

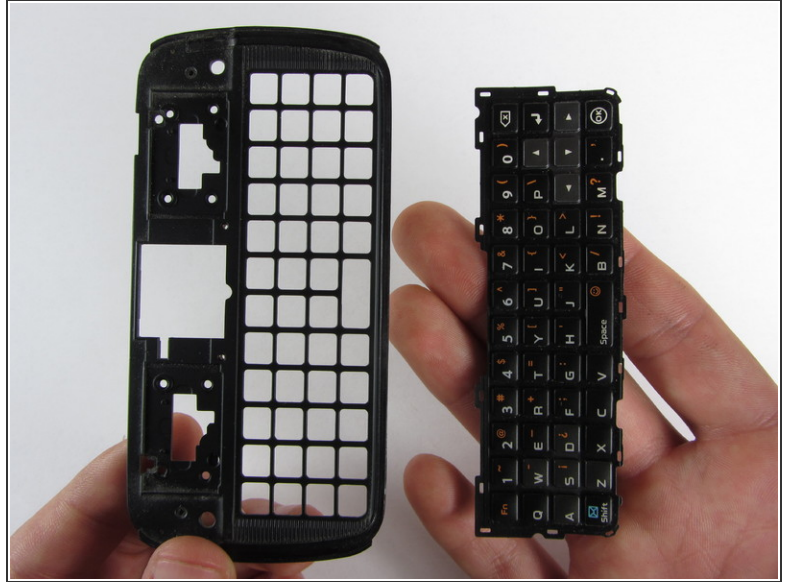

- Turn keyboard holder over and allow the keyboard to simply fall out into your hand.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 08:24:32 AM.